

Rubber Door Sill Assembly instructions.

- 1.) Remove stainless sill trim.
- 2.) Drag the old rubber sills away.




- 3.) Make the old glue soft using a glue adhesive dissolver product like 3M General Purpose Adhesive Remover. If you use other chemicals be sure to test them in an inconspicuous place to be sure it also doesn't remove your paint.


4.) Rub the old softened glue away with protective gloves



5.) Check new rubber assembly position and protect sill paintings by tape.

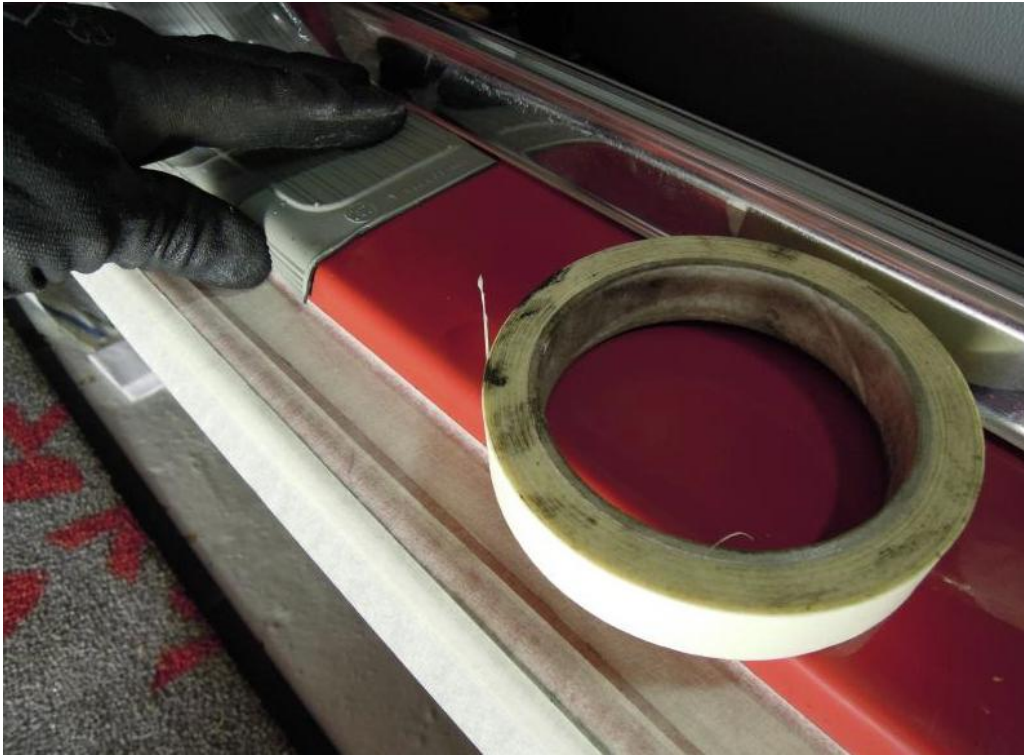

6.) Spread MB universal glue Part 000 989 82 71 on the sill and behind the sill rubber - wait 10 minutes. Take special care with the edges and corners.

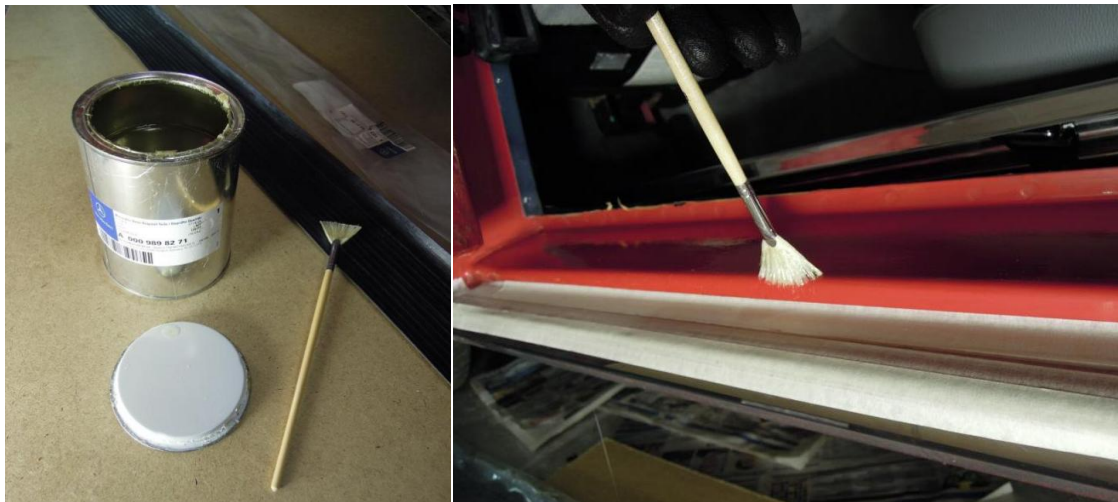

7.) Assemble new sill rubber starting from rear end corner. Bend the rubber edge down when the upper sill side is first completed.



8.) Use plastic wedge to press the front and rear corners properly.



9.) Screw the stainless sill trim back into its place.

Please read all instructions before beginning installation.

These guidelines written by a fellow enthusiast are provided in good faith to help prevent any problems caused by errors in installation. Millers Industries Inc shall not be held responsible nor will it take credit for its content or installation actions taken or not taken. There are many details of installation that are assumed to be general construction knowledge to experienced installers; which are not included in these instructions. These installation guidelines are intended to be strictly recommendations and are not to serve as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner and architect.